


Stage

Stage dimensions		Width / Depth: 6 × 6m Stage height: 1.2m Clear height: 4.2m Height under light equipment SL & SR 3.3m Height under light equipment stage center 3.6m
Wings		Stage Left: 2.5m x 2m Stage Right: 2.5m x 0.80m PLEASE RESPECT EMERGENCY PASSWAYS / EXITS!
Risers	18x 06x 02x 02x	Bütec Riser 2 × 1m Bütec Riser 1 × 1m Bütec Riser 2 × 0.50m Bütec Riser 1 x 0.50m
Legs (fix)	32x 16x 52x 28x 20x 08x 20x 20x 12x	20cm 30cm 40cm 60cm 80cm 90cm 100cm 120cm 50 – 85cm, variable
Legs (wheels)	09x 05x 09x 05x 05x 02x	20cm, single 20cm, double 40cm, single 40cm, double 60cm, single 60cm, double

FOH

Position	No fixed FOH-Position It can be discussed with local P/M on showday. If the show is sold out, please don't waste any space.
Cabling	Cable ways for guest cables to FOH are prepared.

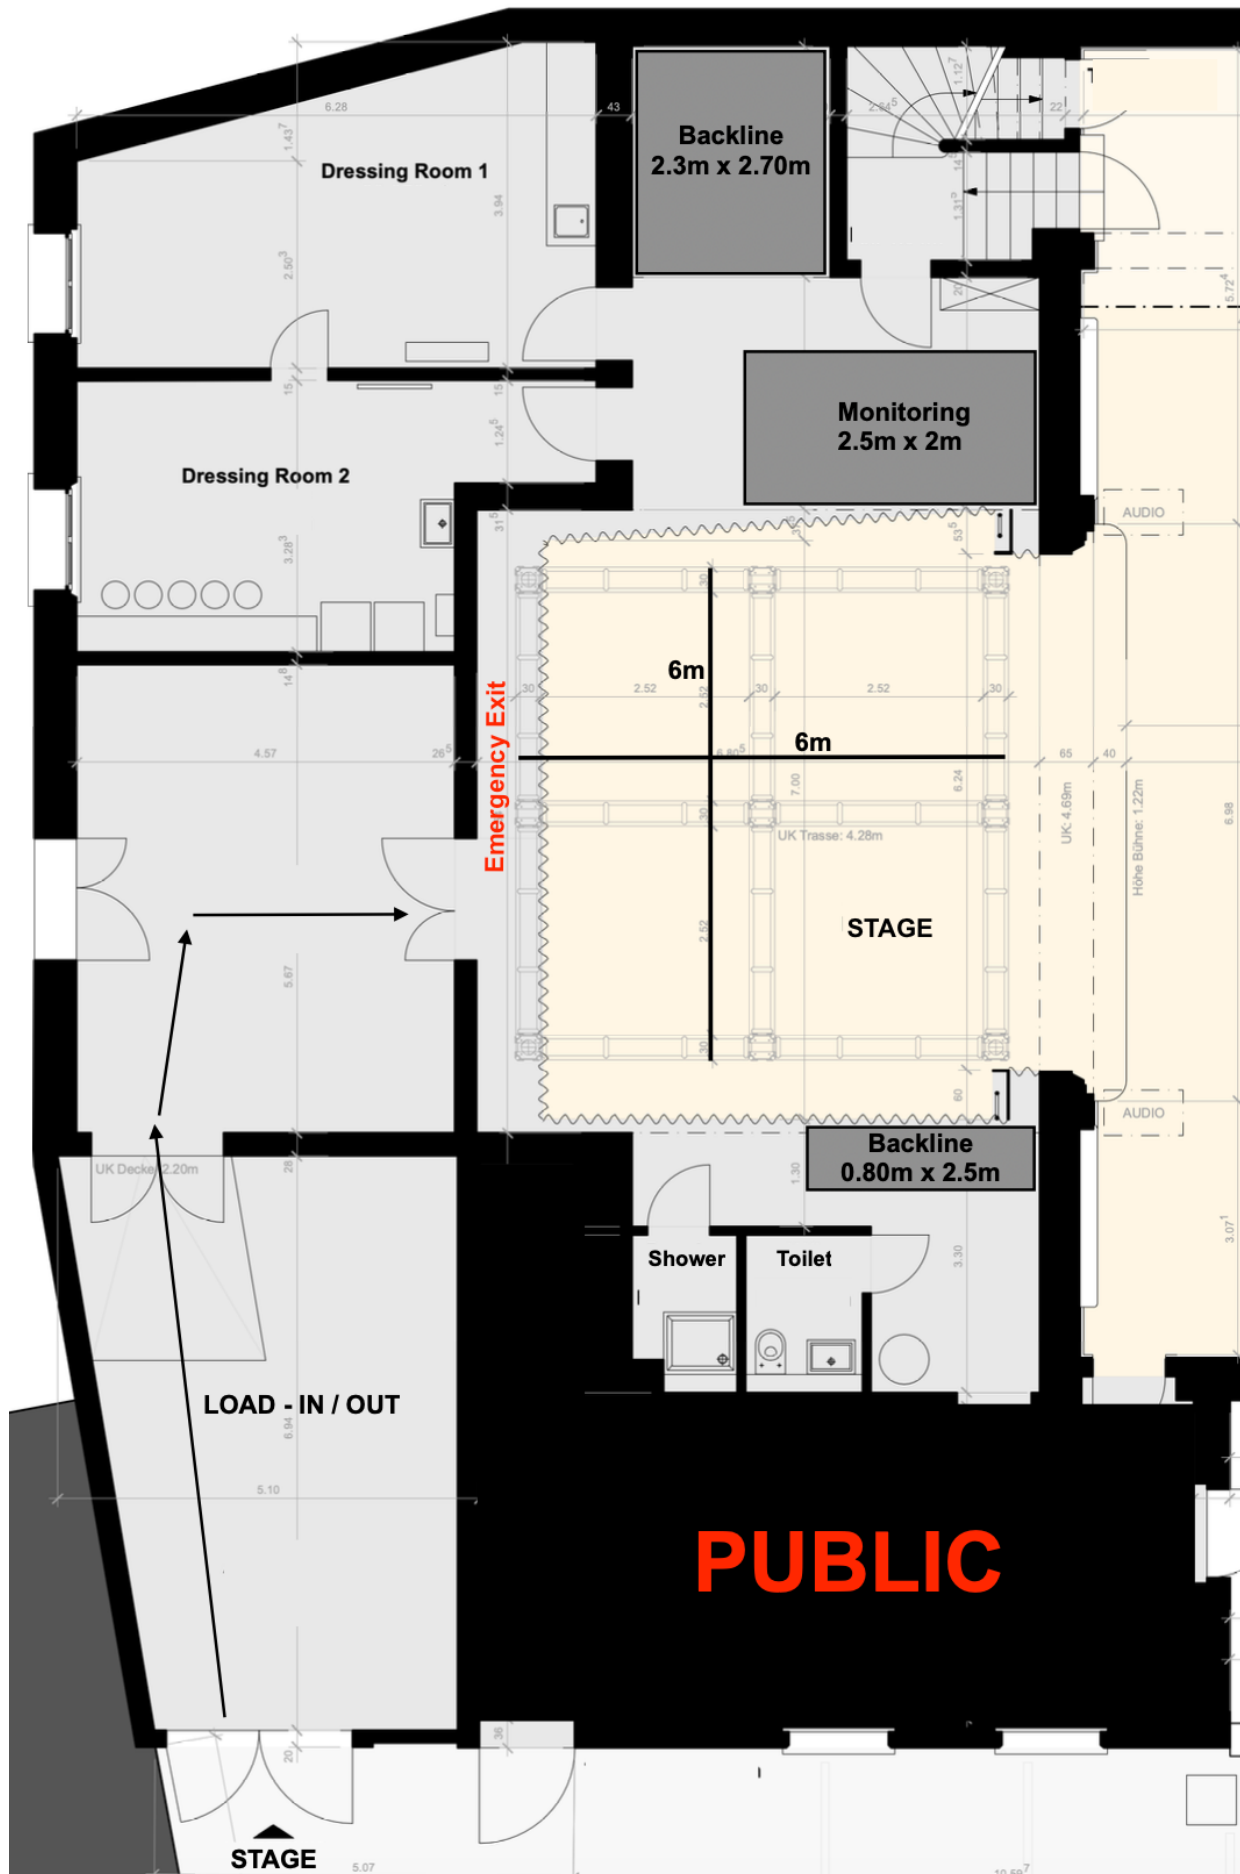

Power

Cables	01x	CEE16/5, 5m
	03x	CEE16/5, 10m
	01x	CEE16/5, 20m
	01x	CEE32/5, 30m (for night liner)
	01x	CEE32/5, 20m
	01x	CEE63/5, 20m
Adapters	01x	CEE16/5 → 1x CEE16/3 (phase 1)
	01x	CEE16/5 → 3x CEE16/3 (3 phases; stage power)
	01x	CEE16/3 → 6x T13; 2x Euro/Schuko (stage power)
	01x	CEE32/5 → 1x CEE63/5
	01x	CEE32/5 → 1x CEE63/3 (blue; 32A only)
	01x	CEE32/5 → 3x CEE32/3 (blue)
Power distribution	01x	CEE32 IN/OUT → 2 × CEE16/5 OUT
	01x	CEE32/5 IN → 2 × CEE16/5 OUT → 3 × CEE16/3 (blue) OUT
	01x	CEE 63/5 IN → 4 × CEE 32/5 OUT

Distribution stage left (audio)

- 1x CEE32/5
- 3x CEE16/5
- 3x CEE16/3
- 1x PA rack (circuit breaker: D40A, no RCD)
- 1x CEE16/3 for audio (stage right)

Main fuse for audio & light (together): 100A

Dimmer

- 1x CEE32/5
- 1x CEE16/5

Main fuse for audio & light (together): 100A

Distribution stage left (light)

- 1x CEE63/5 (circuit breaker D40A, no RCD)
- 1x CEE32/5 (on the same circuit breaker but with additional RCD)
- 5x T13


Main fuse for general use: 63A

Distribution garage (NL / Trucks)

- 1x CEE63/5 (direct throughout from input, no RCD)
- 2x CEE32/5 on one C32A circuit breaker
- 2x CEE16/5 and T25 together on C16A circuit breaker
- 3x T23 on C16A circuit breaker

Main fuse for general use: 63A

Distribution stage left (audio)

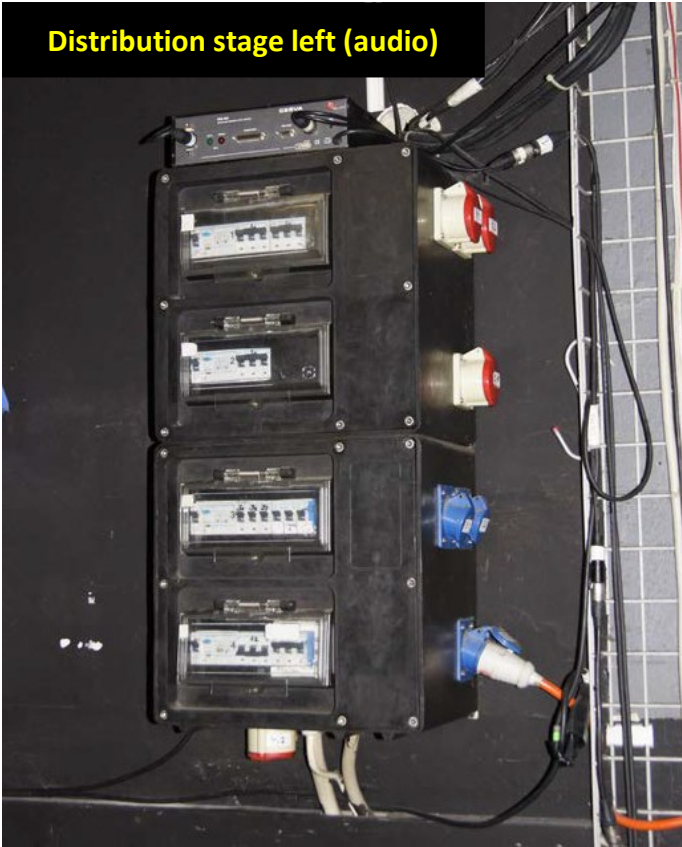

Distribution stage left (light)



Distribution garage (NL / Trucks)



Audio power stage right

